


Technical Specification

O2-C2 Oxygen Sensor



Figure 1 O2-C2 Schematic Diagram

PATENT PENDING

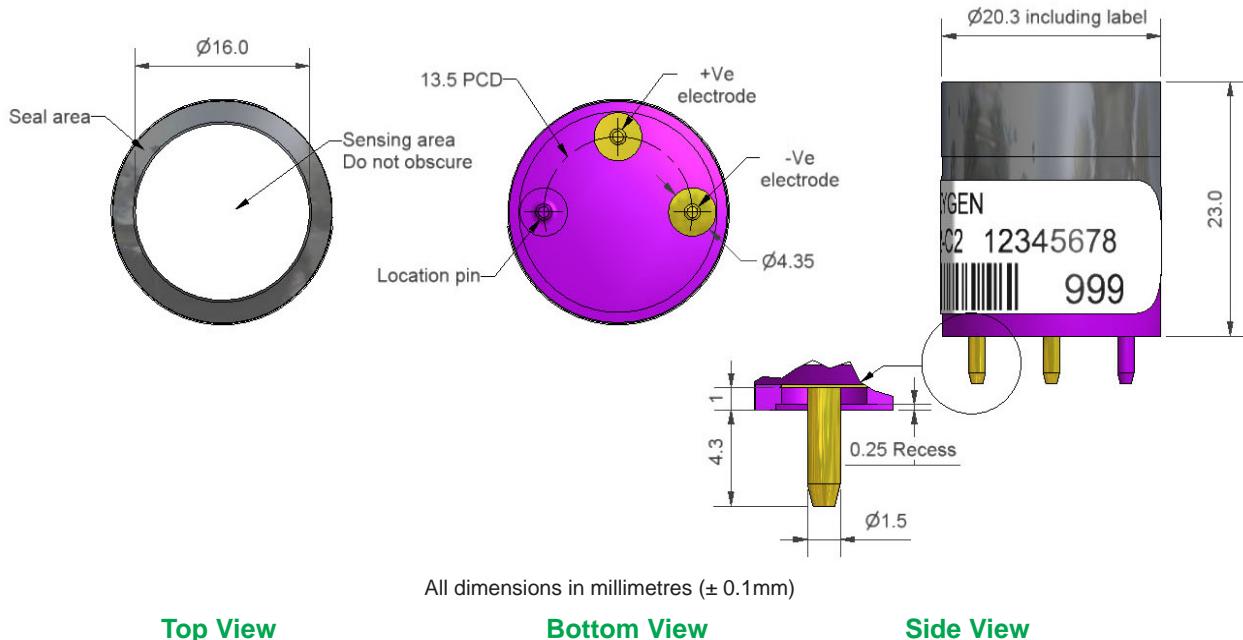

Our (patent pending) O2-C2 includes protection from the rough environment of flue gases, necessary for long sensor lifetime.

PERFORMANCE

Output	$\mu\text{A} @ 20.9\% \text{O}_2$	80 to 120
Response time	$t_{90} (\text{s})$ from 20.9% to 0% O_2	< 45
Zero current	$\mu\text{A} \text{ in } \text{N}_2$	< 2
Linearity	% O_2 deviation @ 10% O_2	-0.6

LIFETIME

Output drift	% change in output @ 3 months	< 1
Operating life	months until 85% original output of 20.9% O_2	> 24

ENVIRONMENTAL

Humidity sensitivity	% O_2 change: 0% to 95% rh @ 40°C	< 0.7
CO_2 sensitivity	(% change O_2 reading) / % CO_2 @ 5% CO_2	0.1
Pressure sensitivity	(% change of output)/(% change of pressure) @ 20kPa	< 0.1

KEY SPECIFICATIONS



Temperature range	°C	-30 to 55
Pressure range	kPa	80 to 120
Humidity range	% rh continuous (0 to 99% rh short term)	5 to 95
Storage period	months @ 3 to 20°C (store in sealed pot, open circuit)	6
Load resistor	Ω (recommended)	47 to 100
Weight	g	<18

NOTE: all sensors are tested at ambient environmental conditions, with 47 ohm load resistor, unless otherwise stated. As applications of use are outside our control, the information provided is given without legal responsibility. Customers should test under their own conditions, to ensure that the sensors are suitable for their own requirements.

Technical Specification

O2-C2 Performance Data

Figure 2 Temperature Dependence in Air


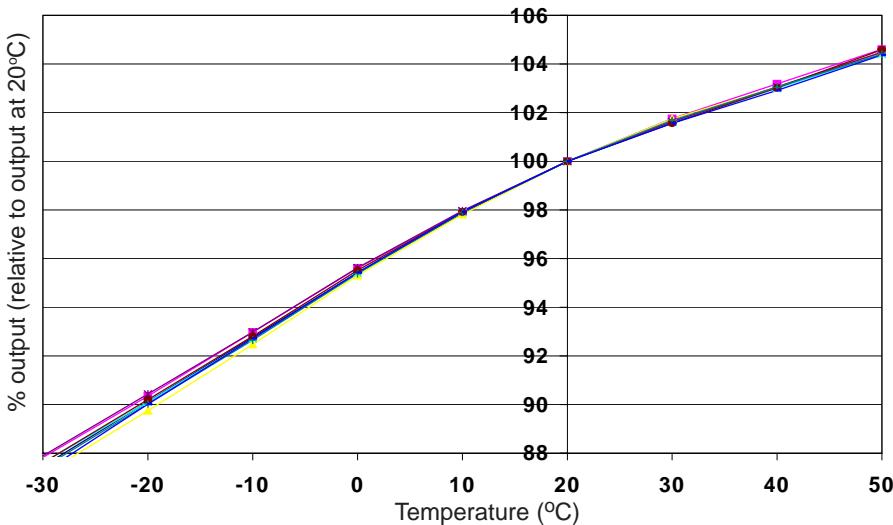


Figure 2 shows the very repeatable variation in sensitivity caused by changes in temperature.

This data is taken from a typical batch of sensors.


Figure 3 Thermal Transient Performance

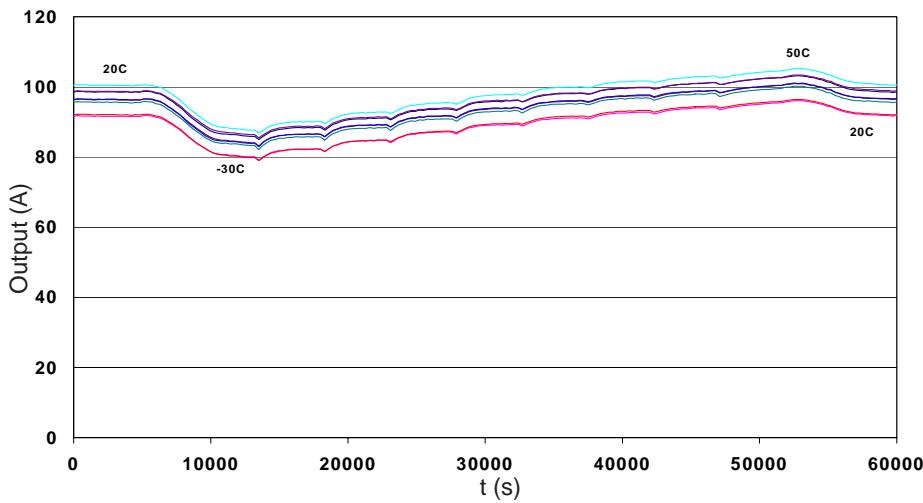

This time trace follows eight sensors' progress as they are first cooled to -30°C, then thermally stepped to +50°C before finally returning to 20°C.

As the O2-C2 experiences rapid temperature changes, the lack of thermal transients avoids false alarms, even when cooled from +20° to -30°C.

Figure 4 Carbon Dioxide Response

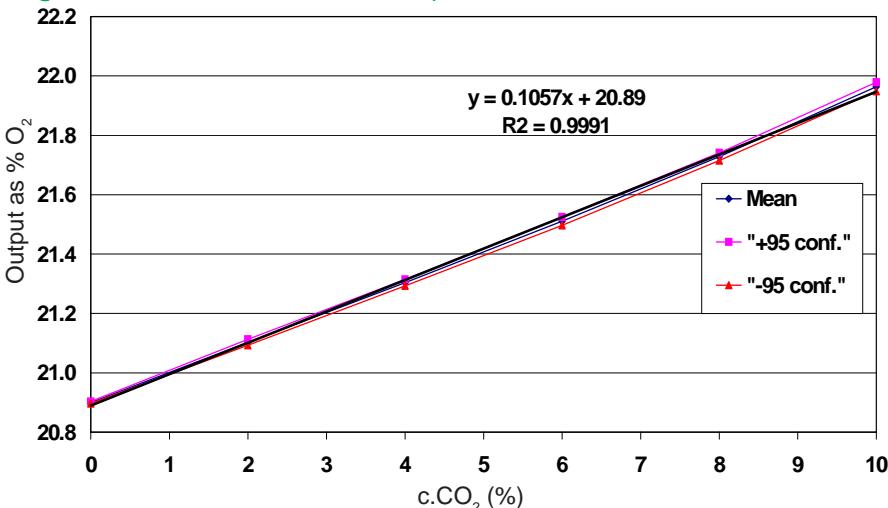

Carbon dioxide increases the diffusion rate of oxygen, increasing the apparent oxygen concentration.

When oxygen concentration is held constant, CO₂ increases the oxygen signal by 10.6% of the CO₂ concentration.