UVA-only SiC based UV photodiode A = 0,50 mm<sup>2</sup>





#### **GENERAL FEATURES**





#### Properties of the SGo<sub>1</sub>D-A<sub>1</sub>8 UV photodiode

- UVA-only sensitivity, PTB reported high chip stability
- Active Area A = 0,50 mm<sup>2</sup>
- TO18 hermetically sealed metal housing, 1 isolated pin and 1 case pin
- 10mW/cm<sup>2</sup> peak radiation results a current of approx. 1850 nA

#### About the material Silicon Carbide (SiC)

SiC provides the unique property of extreme radiation hardness, near-perfect visible blindness, low dark current, high speed and low noise. These features make SiC the best available material for visible blind semiconductor UV detectors. The SiC detectors can be permanently operated at up to 170°C (338°F). The temperature coefficient of signal (responsivity) is also low, < 0,1%/K. Because of the low noise (dark current in the fA range), very low UV radiation intensities can be measured reliably. Please note that this device needs an appropriate amplifier (see typical circuit on page 3).

#### **Options**

SiC photodiodes are available with five different active chip areas from 0,06 mm<sup>2</sup> up to 4,00 mm<sup>2</sup>. Standard version is broadband UVA-UVB-UVC. Four filtered versions lead to a tighter sensitivity range. All photodiodes have a hermetically sealed metal housing (TO type), either a 5,5 mm diameter TO18 housing or a 9,2 mm TO5 housing. Further option is either a 2 pin header (1 isolated, 1 grounded) or a 3 pin header (2 isolated, 1 grounded).

### NOMENCLATURE

SG<sub>01</sub> **S, M, D, L, XL** nothing, A, B, C or E 18, 18ISO90, 18S, 5, 5ISO90 nothing, Lens, **MEGA. GIGA** Chip area **Spectral response** Housing **Special** 2-pin TO18 housing, h = 5.2 mm, nothing = broadband 1 pin isolated, 1 pin grounded 0,06 mm<sup>2</sup>  $\lambda_{max} = 280 \text{ nm}$   $\lambda_{S10\%} = 221 \text{ nm} ... 358 \text{ nm}$ with concentrating lens, TO5 only **18ISO90** 3-pin TO18 housing, h = 5,2 M A = UVAmm, 2 pins isolated, 1 pin grounded 0,20 mm<sup>2</sup>  $\lambda_{max} = 331 \text{ nm}$   $\lambda_{S10\%} = 309 \text{ nm} ... 367 \text{ nm}$ **MEGA** 2-pin TO18 housing, h = 3.7 mm, D R = IIVRwith attenuator 1 pin isolated, 1 pin grounded 0,50 mm<sup>2</sup>  $\lambda_{\text{max}} = 280 \text{ nm}$   $\lambda_{\text{S10\%}} = 231 \text{ nm} \dots 309 \text{ nm}$ up to 0,5 W/cm<sup>2</sup> 2-pin TO<sub>5</sub> housing, h = 4,3 mm for C = UVCbroadband; h = 6,7 mm for filtered UVA, 1,00 mm<sup>2</sup>  $\lambda_{\text{max}} = 275 \text{ nm}$   $\lambda_{\text{S10\%}} = 225 \text{ nm} \dots 287 \text{ nm}$ UVB, UVC, UVI **GIGA** with attenuator **5ISO90** 3-pin TO5 housing, h = 4,2 XL E = UV-Indexup to 7 W/cm2 mm, 2 pins isolated, 1 pin grounded 4,00 mm<sup>2</sup> spectral response according to CIEo87

sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

UVA-only SiC based UV photodiode A = 0,50 mm<sup>2</sup>




2/4

# **SPECIFICATIONS**

Parameter	Symbol	Value	Unit
Spectral Characteristics			
Typical Responsivity at Peak Wavelength	$S_{max}$	0,037	AW <sup>-1</sup>
Wavelength of max. Spectral Responsivity	$\lambda_{\text{max}}$	331	nm
Responsivity Range (S=0,1*S <sub>max</sub> )	-	309 367	nm
Visible Blindness $(S_{max}/S_{>405nm})$	VB	> 10 <sup>10</sup>	-
General Characteristics (T=25°C)			
Active Area	Α	0,50	mm²
Dark Current (1V reverse bias)	$I_d$	1,7	fA
Capacitance	С	125	pF
Short Circuit (10mW/cm² at peak)	lo	1850	nA
Temperature Coefficient	T <sub>c</sub>	< 0,1	%/K
Maximum Ratings			
Operating Temperature	$T_{opt}$	−55 +170	°C
Storage Temperature	$T_{stor}$	−55 <b></b> +170	°C
Soldering Temperature (3s)	$T_{sold}$	260	°C
Reverse Voltage	$V_{Rmax}$	20	V

## NORMALIZED SPECTRAL RESPONSIVITY

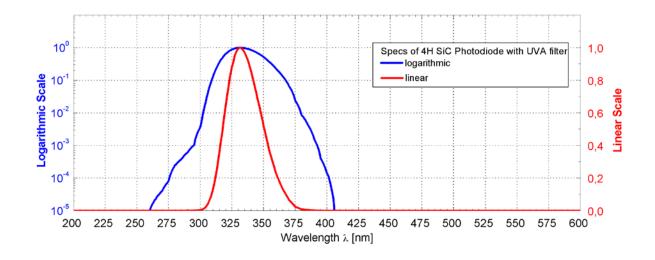


UVA-only SiC based UV photodiode A = 0,50 mm<sup>2</sup>



3/4

## **FIELD OF VIEW**

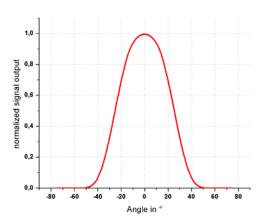


Measurement Setup:

lamp aperture diameter: 10 mm distance lamp aperture to second aperture: 17 mm second aperture diameter: 10 mm distance second aperture to detector: 93 mm

pivot level = top surface of the photodiode window

## TYPICAL CIRCUIT

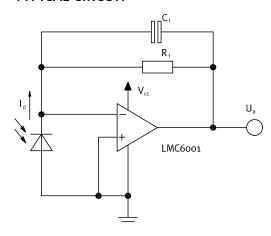

Calculations and Limits:

$$U_a = \ I_p x \ R_f = \ o \ ... \ \sim \ V_{cc}$$

 $U_{a,max}$  depends on load and amplifier type


 $R_f = 10k\Omega$  ...  $\sim 10G\Omega$ ,  $C_f \ge 3pF$ Recommendation:  $R_f \times C_f \ge 10^{-3} \text{s}$  $I_{p,max} = U_{a,max} \div R_f$ 


Bandwidth = DC ...  $\frac{1}{2\pi \times R_f \times C_f}$ 

#### Example:

 $I_p$  = 20nA,  $R_f$  =100MΩ,  $C_f$  =100 pF  $U_a$  = 20 x 10<sup>9</sup>A x 100 x 10<sup>6</sup>Ω = 2V

## DRAWINGS

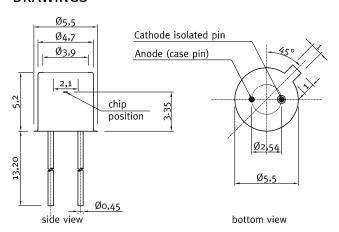

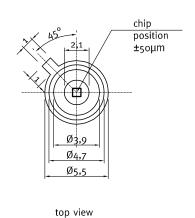

UVA-only SiC based UV photodiode A = 0,50 mm<sup>2</sup>



4/4

### APPLICATION NOTE FOR PHOTODIODES

For correct reading of the photodiode the current (and NOT the voltage) must be analyzed. This requires a short circuiting of the photodiode. Usual approaches are using a **Picoamperemeter** or a **transimpedance amplifier** circuit as shown on page 3.

# **UPGRADE TO A TOCON OR A PROBE**



#### **TOCONs = UV sensors with integrated amplifier**

- SiC based UV hybrid detector with amplifier (o-5V output), no additional amplifier needed, direct connection to controller, voltmeter, etc.
- Measures intensities from 1,8 pW/cm<sup>2</sup> up to 18 W/cm<sup>2</sup>
- UV broadband, UVA, UVB, UVC or Erythema measurements



### Miniature housing with M12x1 thread for the TOCON series


- Optional feature for all TOCON detectors
- Robust stainless steel M12x1 thread body
- Integrated sensor connector (Binder 5-Pin plug) with 2m connector cable
- · Easy to mount and connect



#### **Industrial UV probes**

- Different housings e.g. with cosine response, water pressure proof or sapphire windows
- Different electronic outputs configurable (voltage, current, USB, CAN)
- Good EMC safety for industrial applications

## CALIBRATION SERVICE

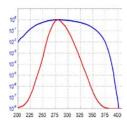

- Different NIST and PTB traceable calibrations and measurements for all sglux sensors
- Calibration of sensors for irradiation measurements
- Calibration of UV sensors on discrete wavelengths
- Determination of a specific spectral sensor responsivity

sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de