UVC-only SiC based UV photodiode A = 4,0 mm<sup>2</sup>



## GE

#### **GENERAL FEATURES**





#### Properties of the SGo1XL-C5 UV photodiode

- UVC-only sensitivity, compliant with DVGW W294, PTB reported high chip stability
- Active Area A = 4,0 mm<sup>2</sup>
- TO5 hermetically sealed metal housing, 1 isolated pin and 1 case pin
- 10mW/cm<sup>2</sup> peak radiation results a current of approx. 48 mA

#### About the material Silicon Carbide (SiC)

SiC provides the unique property of extreme radiation hardness, near-perfect visible blindness, low dark current, high speed and low noise. These features make SiC the best available material for visible blind semiconductor UV detectors. The SiC detectors can be permanently operated at up to 170°C (338°F). The temperature coefficient of signal (responsivity) is also low, < 0,1%/K. Because of the low noise (dark current in the fA range), very low UV radiation intensities can be measured reliably. Please note that this device needs an appropriate amplifier (see typical circuit on page 3).

#### **Options**

SiC photodiodes are available with five different active chip areas from 0,06 mm<sup>2</sup> up to 4,00 mm<sup>2</sup>. Standard version is broadband UVA-UVB-UVC. Four filtered versions lead to a tighter sensitivity range. All photodiodes have a hermetically sealed metal housing (TO type), either a 5,5 mm diameter TO18 housing or a 9,2 mm TO5 housing. Further option is either a 2 pin header (1 isolated, 1 grounded) or a 3 pin header (2 isolated, 1 grounded).

#### **NOMENCLATURE**

SG01			
S, M, D, L, XL	nothing, A, B, C or E	18, 18 5090, 185, 5, 5 5090	nothing, Lens, MEGA, GIGA
Chip area	Spectral response	Housing	Special
<b>S</b> 0,06 mm <sup>2</sup>	nothing = broadband $\lambda_{\text{max}} = 280 \text{ nm}$ $\lambda_{\text{S10\%}} = 221 \text{ nm} \dots 358 \text{ nm}$	<b>18</b> 2-pin TO18 housing, h = 5,2 mm, 1 pin isolated, 1 pin grounded	<b>Lens</b> with concentrating lens, TO5 only
<b>M</b> 0,20 mm²	<b>A = UVA</b> $\lambda_{max} = 331 \text{ nm}  \lambda_{S10\%} = 309 \text{ nm} \dots 367 \text{ nm}$	<b>18ISO90</b> 3-pin TO18 housing, h = 5,2 mm, 2 pins isolated, 1 pin grounded	tens, 105 only
<b>D</b> 0,50 mm²	<b>B = UVB</b> $\lambda_{\text{max}} = 280 \text{ nm}  \lambda_{\text{Sio}\%} = 231 \text{ nm } 309 \text{ nm}$	<b>185</b> 2-pin TO18 housing, h = 3,7 mm, 1 pin isolated, 1 pin grounded	MEGA with attenuator up to 0,5 W/cm <sup>2</sup>
<b>L</b> 1,00 mm <sup>2</sup>	$C = UVC$ $\lambda_{max} = 275 \text{ nm}$ $\lambda_{S10\%} = 225 \text{ nm} \dots 287 \text{ nm}$	<b>5</b> 2-pin TO5 housing, h = 4,3 mm for broadband; h = 6,7 mm for filtered UVA, UVB, UVC, UVI	GIGA
<b>XL</b> 4,00 mm <sup>2</sup>	<b>E = UV-Index</b> spectral response according to CIEo87	<b>515090</b> 3-pin TO5 housing, h = 4,2 mm, 2 pins isolated, 1 pin grounded	with attenuator up to 7 W/cm <sup>2</sup>

sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

UVC-only SiC based UV photodiode A = 4,0 mm<sup>2</sup>




2/4

### **SPECIFICATIONS**

Parameter	Symbol	Value	Unit
Maximum Ratings			
Operating Temperature	$T_{opt}$	−55 +170	°C
Storage Temperature	$T_{stor}$	−55 +170	°C
Soldering Temperature (3s)	$T_{sold}$	260	°C
General Characteristics (T=25°C)			
Active Area	Α	4,0	mm²
Dark Current (1V reverse bias)	$I_d$	13,3	fA
Capacitance	C	1000	pF
Short Circuit (10mW/cm² at peak)	lo	48	mA
Temperature Coefficient	T <sub>c</sub>	<-0,1	%/K
Spectral Characteristics			
Spectral Responsivity at Peak Wavelength	$S_{max}$	0,120 (+ - 10%)	$AW^{-1}$
Wavelength of max. Spectral Responsivity	$\lambda_{\text{max}}$	275	nm
Responsivity Range ( $S=0,1*S_{max}$ )	-	225 <b></b> 287	nm
Visible Blindness $(S_{max}/S_{>405nm})$	VB	> 10 <sup>10</sup>	_

## NORMALIZED SPECTRAL RESPONSIVITY

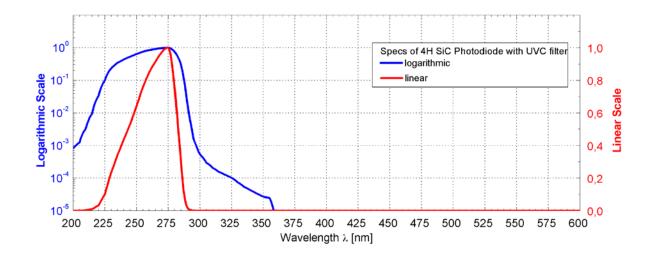


sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

UVC-only SiC based UV photodiode A = 4,0 mm<sup>2</sup>



3/4

## **FIELD OF VIEW**

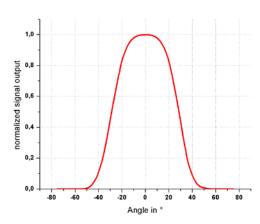


#### Measurement Setup:

lamp aperture diameter: 10 mm distance lamp aperture to second aperture: 17 mm second aperture diameter: 10 mm distance second aperture to detector: 93 mm

pivot level = top surface of the photodiode window

## TYPICAL CIRCUIT

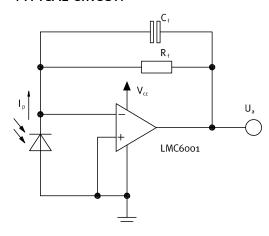

Calculations and Limits:

$$U_a = \ I_p x \ R_f = \ o \ ... \ \sim \ V_{cc}$$

 $U_{a,max}$  depends on load and amplifier type


 $R_f = 10k\Omega$  ...  $\sim 10G\Omega$ ,  $C_f \ge 3pF$ Recommendation:  $R_f \times C_f \ge 10^{-3} \text{s}$  $I_{p,max} = U_{a,max} \div R_f$ 


Bandwidth = DC ... 
$$\frac{1}{2\pi \times R_f \times C}$$

#### Example:

 $I_p = 20$  nA,  $R_f = 100$  M $\Omega$ ,  $C_f = 100$  pF  $U_a = 20 \times 10^9$  A × 100 × 10<sup>6</sup>  $\Omega = 2$  V

## DRAWINGS

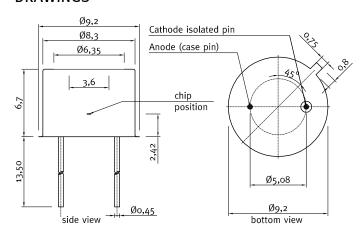

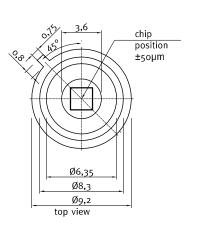

UVC-only SiC based UV photodiode A = 4,0 mm<sup>2</sup>





### APPLICATION NOTE FOR PHOTODIODES

For correct reading of the photodiode the current (and NOT the voltage) must be analyzed. This requires a short circuiting of the photodiode. Usual approaches are using a **Picoamperemeter** or a **transimpedance amplifier** circuit as shown on page 3.

## **UPGRADE TO A TOCON OR A PROBE**



#### **TOCONs = UV sensors with integrated amplifier**

- SiC based UV hybrid detector with amplifier (o-5V output), no additional amplifier needed, direct connection to controller, voltmeter, etc.
- Measures intensities from 1,8 pW/cm<sup>2</sup> up to 18 W/cm<sup>2</sup>
- UV broadband, UVA, UVB, UVC or Erythema measurements



### Miniature housing with M12x1 thread for the TOCON series


- Optional feature for all TOCON detectors
- Robust stainless steel M12x1 thread body
- Integrated sensor connector (Binder 5-Pin plug) with 2m connector cable
- · Easy to mount and connect



#### **Industrial UV probes**

- Different housings e.g. with cosine response, water pressure proof or sapphire windows
- Different electronic outputs configurable (voltage, current, USB, CAN)
- Good EMC safety for industrial applications

### CALIBRATION SERVICE

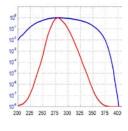

- Different NIST and PTB traceable calibrations and measurements for all sglux sensors
- Calibration of sensors for irradiation measurements
- Calibration of UV sensors on discrete wavelengths
- Determination of a specific spectral sensor responsivity